
Boost Box Setup Guide

Thank you for your Boost Box™ purchase!


What's included

- (1) Boost Box™ by Advantage Software, Inc.
- (1) Power adapter
- (1) RJ45 Crossover cable (labeled)
- (1) Velvet Boost Box sleeve

Before beginning please note that your Boost Box was shipped with an RJ45 Crossover cable. This looks like a standard ethernet cable, but it has a special wiring configuration and cannot be used for regular internet connectivity purposes. For this reason, the Crossover cable has been clearly marked for your convenience.

If you misplace your Crossover cable, another can be purchased from Advantage.



- Step 1: Insert the power cable into your Boost Box into the power input port labeled DC.
- Step 2: Plug the included crossover cable into either LAN port.
- Step 3: Plug the Crossover cable into your Eclipse computer.
- Step 4: Power on the Boost Box using the power button.

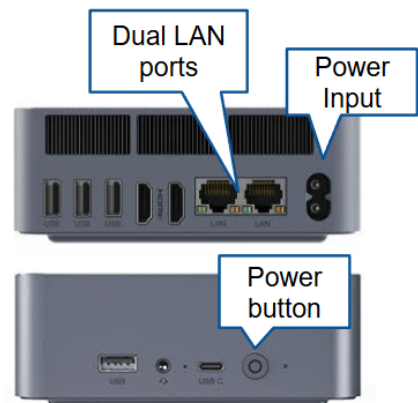


Windows Network Settings

To access Boost Box settings in Windows:


- Click start and type “network”.
- Click **View network connections**.
- Identify the Boost Box LAN connection to your PC. Most computers only have one LAN/Ethernet port.

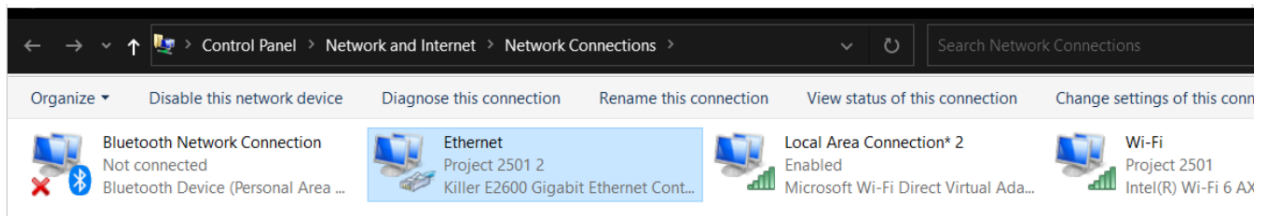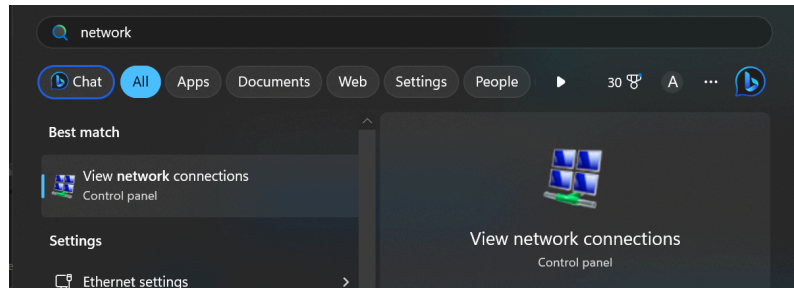

- Double-click on the **LAN/Ethernet** network and then choose **Properties**.

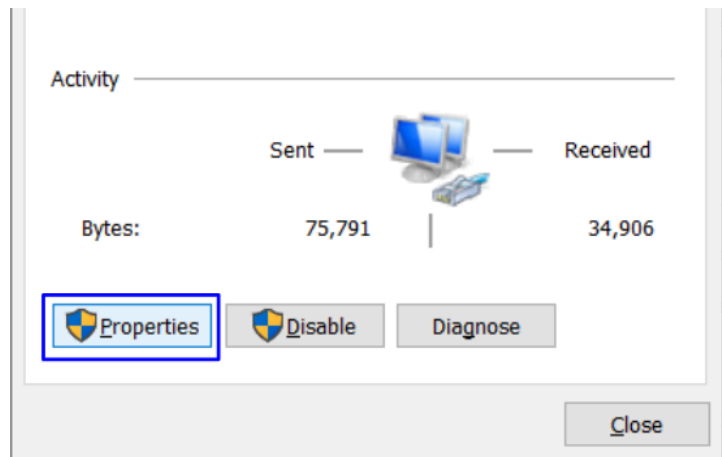

- Double-click on **Internet Protocol Version 4 (TCP/IPv4)**.

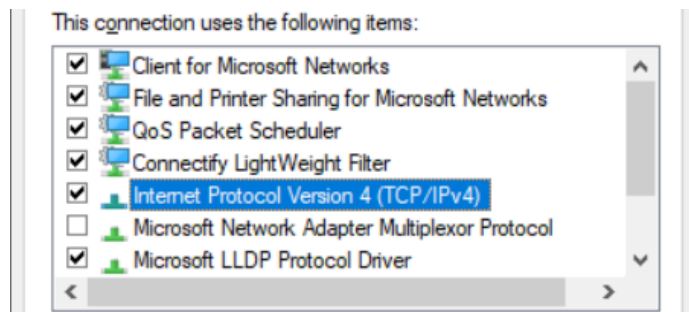

Set Boost Box IP addresses

- Step 1: Choose Use the following IP address:

Obtain an IP address automatically
 Use the following IP address:

IP address:
 Subnet mask:
 Default gateway:

- Step 2: Set the IP address field to **192.168.101.2**
(Note that you do not need to type the . in manually. Use the right arrow to move from 0 to the space for 2.)

Obtain an IP address automatically
 Use the following IP address:

IP address:
 Subnet mask:
 Default gateway:

- Step 3: Press **Tab** to autofill the Subnet mask.

Obtain an IP address automatically
 Use the following IP address:


IP address:
 Subnet mask:
 Default gateway:

- Step 4: Set the Default gateway to **192.168.101.1**

Use the following IP address:

IP address:
 Subnet mask:
 Default gateway:


- Press **OK** to save these changes.

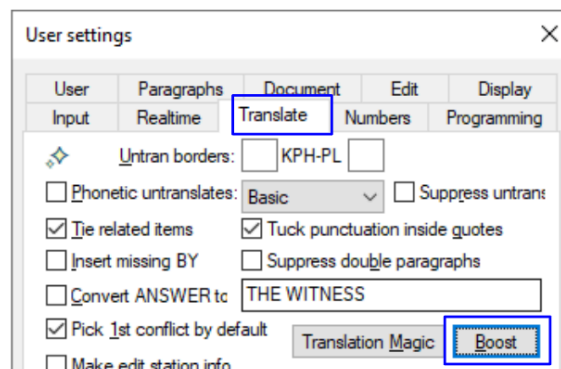


Eclipse 11 Settings

- Open Eclipse.
- Navigate to **User Settings (Alt+U)**→**Translate** tab.
- Click on Boost.


- Check **Boost**.
- Check **Boost Flow** if desired.
- Set Engine to **Speechmatics**.
- Click on **Setup...**

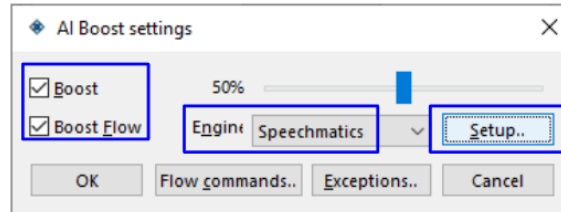


- In the Speech options setup window, choose **SpeechMatics**.

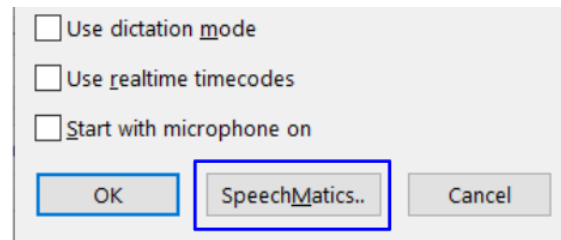

- Next, choose **IP address** and press **OK**.

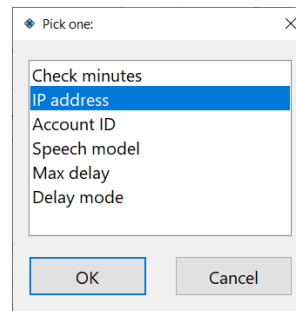


- Set the IP address:
Eclipse 11: **ws://192.168.101.1**
- Press **OK**.

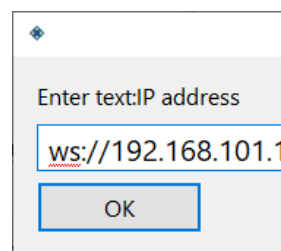


Eclipse 12 Settings

- Open Eclipse.
- Navigate to **User Settings (Alt+U)**→**Translate** tab.
- Click on Boost.

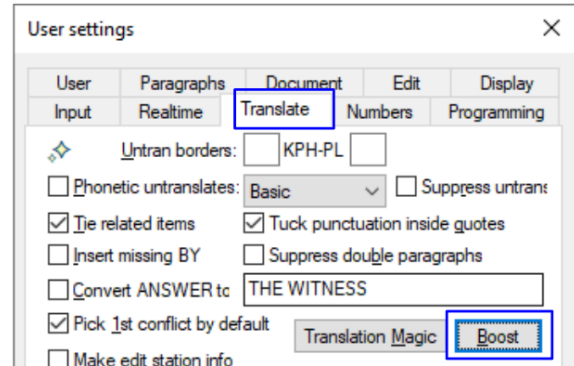

- Click **Setup...**

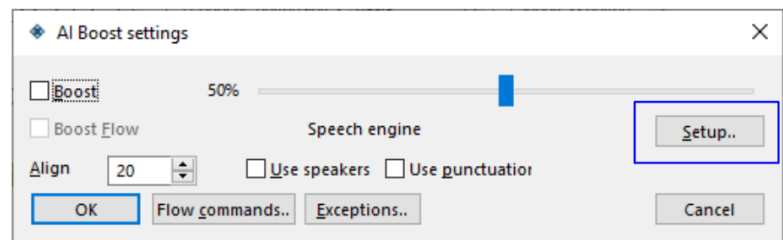

- Click the **URL** dropdown and select **ws://192.168.101.1:9000**.

